


# NEOXs




**QUICK  
REFERENCE**



# FRONT

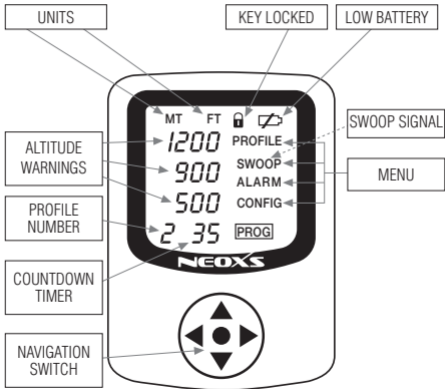

## BACK

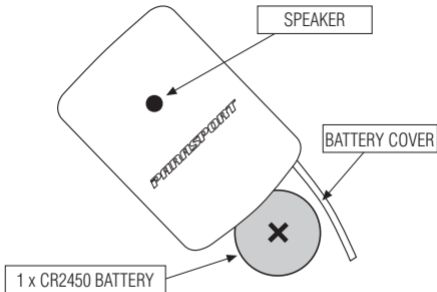

**INSERT WITH + TOWARDS THE BOTTOM OF THE UNIT!**

After replacing the battery and when receiving a new unit, the NEOXS is in power saving mode and is inoperative. Pushing the button will wake the unit and start regular operation until next battery replacement.

## GROUND

MOVE TO PREVIOUS MENU ITEM



SHOW/HIDE MENU

PRESS KEY TO SELECT MENU ITEM

MOVE TO NEXT MENU ITEM



## INFLIGHT




Press any key to wake up the Neoxs from stand-by mode (display turned off).


Press and release SELECT few times until the lock turns off to unlock the key.

After 30 seconds without touching the button the unit locks the key and then returns to stand by mode.

## PROFILES

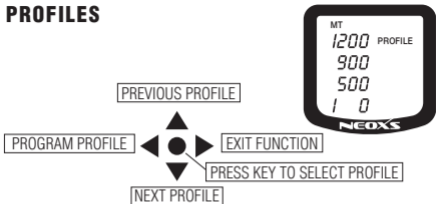

## PROGRAM PROFILE

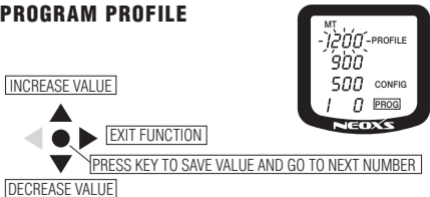

## PROGRAM SWOOP



INCREASE VALUE



SAVE VALUES AND EXIT FUNCTION

PRESS KEY TO SAVE VALUE AND GO TO NEXT NUMBER

DECREASE VALUE

## PROGRAM ALARMS



INCREASE VALUE



SAVE VALUES AND EXIT FUNCTION


PRESS KEY TO SAVE VALUE AND GO TO NEXT NUMBER

DECREASE VALUE


## GROUND SET



## VOLUME SET

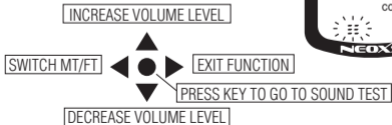

## SOUND TEST

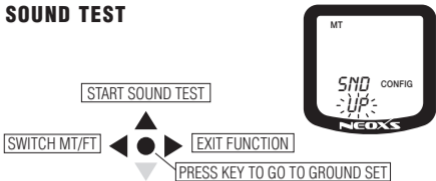

Sound test sequence can be interrupted by touching the button.



**PARASPORT**<sup>®</sup>  
SKYDIVING EQUIPMENT

PARASPORT ITALIA - Via Vigone, 25/A - 10061 CAVOUR (TO) Italy

Tel. +39(0121)69692 - Fax +39(0121)6207

*www.parasport.it - info@parasport.it*